

Row Covers

Material List:

- A. Black Poly Pipe (3/4",80psi)
- B. Snap Clamps (at least three per hoop.
More may be needed if windy.)
- C. Covering Material
 - Shade Cloth
 - Clear Plastic
 - Bird Netting
 - or other material

Assembly Steps:

1. Push ends of Items "A"
(poly pipe hoops)
approx. 6" into soil. Fig. 1
2. Lay Item "C"
(covering of choice)
over hoops.
3. Attach Items "B"
(snap clamps) as needed.
Fig. 2

Fig 1.

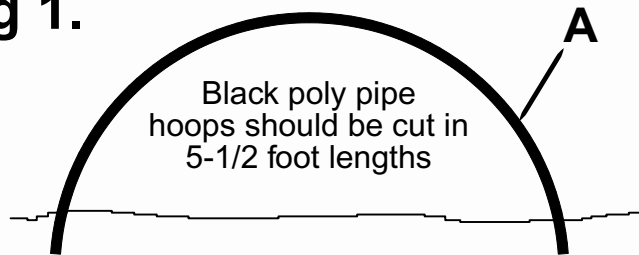


Fig 2.

